



KOMBINOVANÁ SIRÉNA CS1 S BLIKAČOM, PRIEMER 93 MM

Série CS1

C111221005

CS1 siréna/záblesk LED oranžový 24 V

- Rýchla inštalácia vďaka systému bajonetových zámkov
- Výber z 32 tónov
- Akustická intenzita 86 - 106 dB
- Krytie IP65




POPIS PRODUKTU

Sirény pre vnútorné a vonkajšie použitie (IP 65), druh tónu je voliteľný DIP-prepínačom vnútri. Oba typy možno objednať v bielej a červenej farbe.

ŠPECIFIKÁCIA



Druh montáže	Horizontálny, Vertikálny
Farba	Oranžová
Farba tela	Biela
Frekvencia blikania	1 Hz
Frekvencia max	2900 Hz
Frekvencia min	440 Hz
Hladina zvuku max	109 dB
Hladina zvuku min	88 dB
Hmotnosť	258 g
Menovitý prúd max	0,041 A
Menovitý prúd min	0,014 A
Napájacie napätie	24 V
Napájacie napätie AC / DC max.	35 V
Napájacie napätie AC / DC min.	18 V
Ovládanie zvuku	Áno

Počet tónov	32 ks
Prevádzková teplota max.	70 °C
Prevádzková teplota min.	-20 °C
Trieda krytia	IP65
Typ zdroja	Oranžová LED
Zdroj svetla	LED

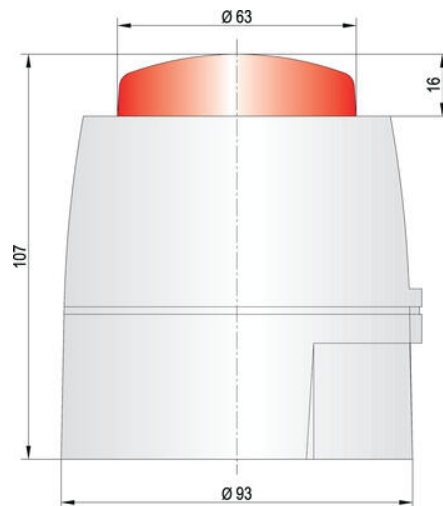

Tontabelle / Tone table

No.	Sound	Tone frequency	DR-switch	2nd stage alarm (Hz)
1	1 F Siren	800 Hz on 0.5 sec	11111	800 count
2	Overhead siren BS standard	920 Hz on 2s	11111	800 count
3	Whistle Tone BS standard	800/1000 Hz on 0.5 sec	11101	800 count
4	Overhead siren BS standard	1000 Hz on 2s	11100	800 count
5	1 F Back up siren	800 Hz on 0.5 sec on/off	11011	200 count
6	1 F Back up alarm	800 Hz on 1.0 sec on/off	11010	800 count
7	1 F Back up siren and tone - Int	800 Hz on 1.0 sec on/off	11001	800 count
8	1 F Overhead tone BS/BS2	800 Hz cont	11000	Siren tone
9	Swedish tone 1190	800/200 Hz on 1 Hz	10111	800 count
10	Australian slow whoop	Intermittent 970 Hz 0.25 sec on/0.25 sec off	10110	3.75 sec on 0.25 sec off 800/200
11	Dutch sweep tone	970 Hz cont	10101	800 count 0.5 sec on/off 800/200
12	Overhead siren tone	1000 Hz on 2s	10100	800 count
13	Overhead tone 25 Hz	800/25 Hz on 2s	10011	800 count
14	Alarm 1 F also siren	800/1000 Hz on 2s	10010	200 count
15	Test tone	800/1000 Hz on 2s	10001	200 count
16	US Temporal Pattern 1F	250 Hz for 0.5 sec on 0.5 sec off	10000	800 count
17	Intermittent tone BS standard	Intermittent 800 Hz on 0.5 sec on/off	01111	800 count
18	BS BS2 1 F BS2 BS2 PS 1 BS2	Intermittent 970 Hz 0.25 sec on/0.25 sec off	01110	Siren tone
19	Intermittent tone BS2	1000 Hz on 0.5 sec on/off	01101	800 count
20	BS/BS2 1 F	Intermittent 200 Hz 100 ms on 400 ms off	01100	Siren tone
21	Continuous tone	1000 Hz cont	01011	Siren tone
22	1 F Siren	800/1000 Hz on 1 Hz	01010	800 count
23	1 F Continuous	800 Hz	01001	200 count
24	Overhead tone 25 Hz	800/25 Hz on 2s	01000	800 count
25	German 119 tone	Intermittent 660 Hz 350 ms on / 150 ms off	00111	800 count
26	Swedish tone 1190	Intermittent 800 Hz 350 ms on / 150 ms off	00110	Siren tone
27	French tone 8190	Intermittent 800 Hz 350 ms on / 150 ms off	00100	800 count
28	Intermittent tone BS2	Intermittent 800 Hz on 0.5 sec on/off	00101	Siren tone
29	US Temporal Pattern 1F	250 Hz for 0.5 sec on 0.5 sec off	00011	200 count
30	Siren 2 tone ramp 1/short	800/200 Hz rising then falling @ 25 Hz	00010	800 count
31	PP 100 Hz - 1 tone	Intermittent tone 800/200 Hz on 2s	00000	800 count
32	Siren 2 tone ramp 1/long	800/200 Hz 3 sec rising / 3 sec falling	00001	800 count

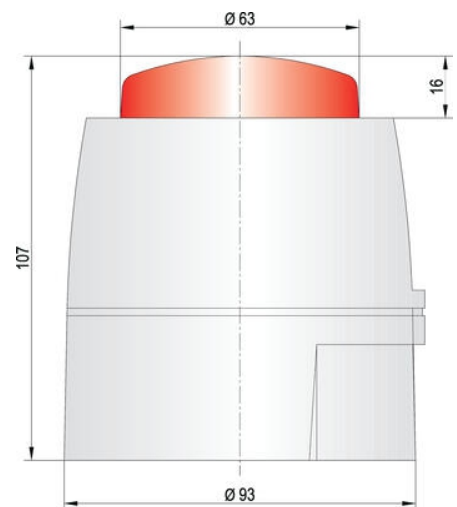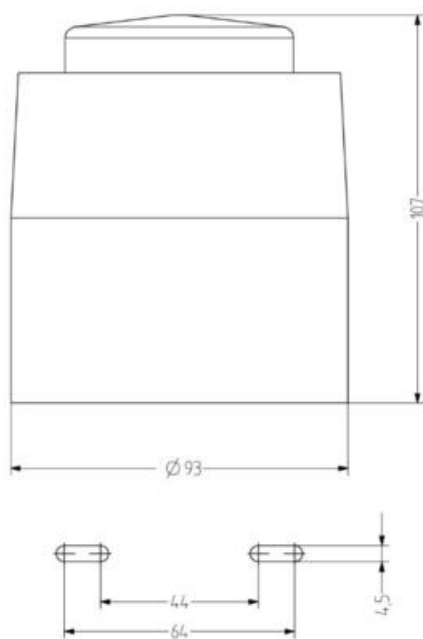

Nr.	Sound	Tone frequency	DR switch	2nd stage alarm (Hz)
1	U.F. Buzzer	800 - 1000Hz at 0.5 sec	11111	800 cont
2	Alarm tone (U.F. stopped)	800/500Hz at 2Hz	11110	800 cont
3	Warning tone (U.F. stopped)	800/1000Hz at 0.5 sec	11101	800 cont
4	Alarm tone (U.F. stopped)	800/500Hz at 2Hz	11100	800 cont
5	U.F. Buzzer at interrupted tone	800Hz at 1.0 sec on/off	11011	800 cont
6	U.F. Buzzer at 100ms	800Hz at 1.0 sec on/off	11010	800 cont
7	U.F. Buzzer at interrupted tone - fast	800Hz at 1.0 sec on/off	11001	800 cont
8	U.F. Continuous tone (2000)	800Hz cont	11000	800 tone
9	Alarm tone (1 Hz)	800/500Hz at 1Hz	10111	800 cont
10	Australian slow whoop	Intermittent 970Hz 0.425ms on/0.425ms off	10110	500/1000 3.75 sec on 0.425 sec off
11	Dutch sweep tone	970Hz cont	10101	0.5 sec on 0.5 sec off
12	Alarm tone (siren tone)	800/500Hz at 2Hz	10100	800 cont
13	Alarm tone (2 Hz)	800/500Hz at 2Hz	10011	800 cont
14	Alarm tone (U.F. siren tone)	800/500Hz at 2Hz	10010	800 cont
15	U.F. Buzzer (siren)	800/500Hz at 2Hz	10001	800 cont
16	US Temporal Pattern (F)	800Hz for 0.5 sec on 0.5 sec off x3 then 1.5 sec then repeat	10000	800 cont
17	Interrupted tone (S) siren	Intermittent tone 800Hz at 0.5 sec on/off	01111	800 cont
18	800/800 U.F. (S) siren (1 Hz)	Intermittent 970Hz 500ms on/500ms off	01110	Siren tone
19	Intermittent tone (medium)	1000Hz at 1.0 sec on/off	01101	800 cont
20	800/800 U.F.	Intermittent 1000Hz 500ms on/500ms off	01100	Siren tone
21	Continuous tone	1000Hz continuous	01011	Siren tone
22	U.F. Buzzer	800/500Hz on/off at 112Hz	01010	800 cont
23	U.F. Continuous	800Hz	01001	800 cont
24	Alarm tone (2 Hz)	800/500Hz at 2Hz	01000	800 cont
25	German (U.F.) tone	Intermittent 800/500Hz at 1Hz	00111	800 cont
26	Swedish Fire alarm	Intermittent 650Hz 150 ms on / 500 ms off	00110	Siren tone
27	French tone at 90	1000Hz for 100 ms and within 500ms	00101	800 cont
28	Swedish at short signal	Continuous 800Hz	00100	Siren tone
29	US Temporal Pattern (F)	800Hz for 0.5 sec on 0.5 sec off off for 1.5 sec then repeat	00011	800 cont
30	Alarm 2 siren (siren) (F) cont	800/500Hz siren then falling 8.75 sec	00010	800 cont
31	U.F. (S) siren (1 Hz) siren	Intermittent tone 800/500Hz 1Hz on	00001	800 cont
32	Alarm 2 siren (siren) (F) cont	800/500Hz 3 sec rising / 3 sec falling	00000	800 cont

