



KOMBINOVANÁ SIRÉNA CS1 S BLIKAČOM, PRIEMER 93 MM

Série CS1

C111222005

CS1 siréna/záblesk LED červená 24 V

- Rýchla inštalácia vďaka systému bajonetových zámkov
- Výber z 32 tónov
- Akustická intenzita 86 - 106 dB
- Krytie IP65




POPIS PRODUKTU

Sirény pre vnútorné a vonkajšie použitie (IP 65), druh tónu je voliteľný DIP-prepínačom vnútri. Oba typy možno objednať v bielej a červenej farbe.

ŠPECIFIKÁCIA




Druh montáže	Horizontálny, Vertikálny
Farba	Červená
Farba tela	Biela
Frekvencia blikania	1 Hz
Frekvencia max	2900 Hz
Frekvencia min	440 Hz
Hladina zvuku max	109 dB
Hladina zvuku min	88 dB
Hmotnosť	258 g
Menovitý prúd max	0,041 A
Menovitý prúd min	0,014 A
Napájacie napätie	24 V
Napájacie napätie AC / DC max.	35 V
Napájacie napätie AC / DC min.	18 V
Ovládanie zvuku	Áno

Počet tónov	32 ks
Prevádzková teplota max.	70 °C
Prevádzková teplota min.	-20 °C
Trieda krytia	IP65
Typ zdroja	Oranžová LED
Zdroj svetla	LED

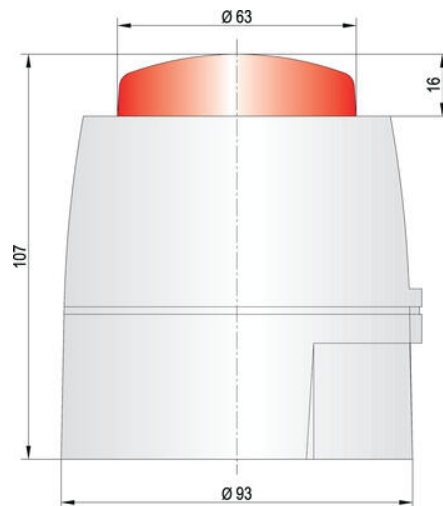

Tontabelle / Tone table

No.	Sound	Tone frequency	DR-switch	2nd stage alarm (Hz)
1	1 F Siren	800 Hz on 0.5 sec	11111	800 count
2	Overhead siren BS standard	920 Hz on 2s	11111	800 count
3	Whistle Tone BS standard	800/1000 Hz on 0.5 sec	11101	800 count
4	Overhead siren BS standard	1000 Hz on 2s	11100	800 count
5	1 F Back up siren	800 Hz on 0.5 sec on/off	11011	200 count
6	1 F Back up alarm	800 Hz on 1.0 sec on/off	11010	800 count
7	1 F Back up siren and tone - Int	800 Hz on 1.0 sec on/off	11001	800 count
8	1 F Overhead tone BS/BS2	800 Hz cont	11000	Siren tone
9	Swedish tone 1190	800/2000 Hz on 1 Hz	10111	800 count
10	Australian slow whoop	Intermittent 970 Hz 0.25 sec on/0.25 sec off	10110	3.75 sec on 0.25 sec off 800/2000
11	Dutch sweep tone	970 Hz cont	10101	800 count 0.5 sec on/off 800/2000
12	Overhead siren tone	1000 Hz on 2s	10100	800 count
13	Overhead tone 25 Hz	800/25 Hz on 2s	10011	800 count
14	Alarm 1 F also siren	800/2000 Hz on 2s	10010	200 count
15	Test tone	800/2000 Hz on 2s	10001	200 count
16	US Temporal Pattern 1F	2500 Hz for 0.5 sec on 0.5 sec off	10000	800 count
17	Intermittent tone BS standard	Intermittent tone 800 Hz on 0.5 sec on/off	01111	800 count
18	BS BS2 1 F BS BS2 2 F 1 F	Intermittent 970 Hz 0.25 sec on/0.25 sec off	01110	Siren tone
19	Intermittent tone BS	1000 Hz on 0.5 sec on/off	01101	800 count
20	BS BS2 1 F	Intermittent 2000 Hz 0.5 sec on/off	01100	Siren tone
21	Continuous tone	800 Hz cont	01011	Siren tone
22	1 F Siren	800/1000 Hz on 0.5 sec	01010	800 count
23	1 F Continuous	800 Hz	01001	200 count
24	Overhead tone 25 Hz	800/25 Hz on 2s	01000	800 count
25	German 119 tone	Intermittent 660 Hz 0.5 sec on / 0.5 sec off	00111	800 count
26	Swedish tone 1190	Intermittent 800 Hz 0.5 sec on / 0.5 sec off	00110	Siren tone
27	French tone 8190	Intermittent 800 Hz 0.5 sec on / 0.5 sec off	00101	800 count
28	Swedish tone 1190	Intermittent 800 Hz 0.5 sec on / 0.5 sec off	00100	Siren tone
29	US Temporal Pattern 1F	2500 Hz for 0.5 sec on 0.5 sec off	00011	800 count
30	Siren 2 tone ramp 1/short	800/2000 Hz rising then falling @ 25 Hz	00010	800 count
31	PP 1000 Hz - 1 tone	Intermittent tone 800/2000 Hz on	00001	800 count
32	Siren 2 tone ramp 1/long	800/2000 Hz 3 sec rising / 3 sec falling	00000	800 count

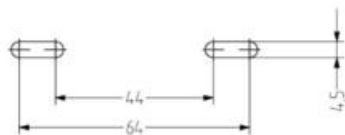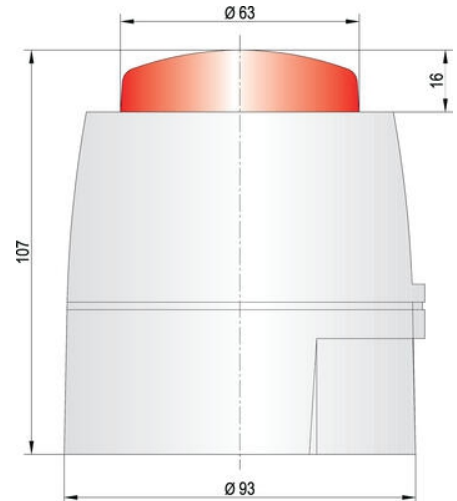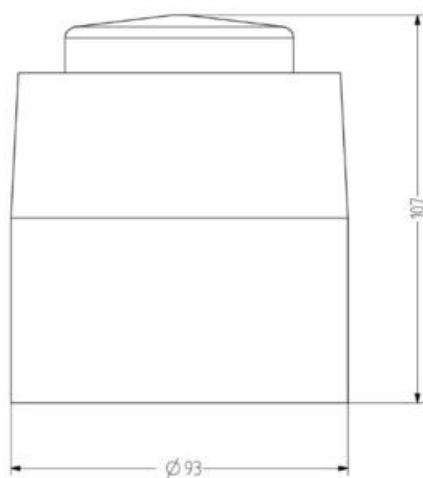

Nr.	Sound	Tone frequency	DR switch	2nd stage alarm (Hz)
1	1-F Buzzer	800 - 1000Hz at 0.5 sec	111111	800 cont
2	Alarm tone with 1st stage	800/500Hz at 2Hz	111110	800 cont
3	Warning tone 1st stage	800/1000Hz at 0.5 sec	111101	800 cont
4	Alarm tone with 2nd stage	800/500Hz at 2Hz	111100	800 cont
5	1-F Buzzer with 1st stage	800Hz at 1.0 sec on/off	110111	800 cont
6	1-F Buzzer with 2nd stage	800Hz at 1.0 sec on/off	110110	800 cont
7	1-F Buzzer with 3rd stage	800Hz at 1.0 sec on/off	110011	800 cont
8	1-F Buzzer with 4th stage	800Hz at 1.0 sec on/off	110010	800 cont
9	Alarm tone 1st stage	800/500Hz at 1Hz	101111	800 cont
10	Australian slow whoop	Intermittent 970Hz 0.425ms on/0.425ms off	101110	800/500 3.75 sec on 0.425 sec off
11	Dutch sweep tone	970Hz cont	101011	0.5 sec on 0.5 sec off
12	Alarm tone 2nd stage	800/500Hz at 2Hz	101010	800 cont
13	Alarm tone 3rd stage	800/500Hz at 2Hz	100111	800 cont
14	Alarm tone 4th stage	800/500Hz at 2Hz	100110	800 cont
15	1-F Buzzer	800/500Hz at 0.5 sec	100011	800 cont
16	US Temporal Pattern 1-F	800Hz for 0.5 sec on 0.5 sec off	100010	800 cont
17	Intermittent tone 800Hz	Intermittent tone 800Hz at 0.5 sec on/off	011111	800 cont
18	800/500Hz 1-F Buzzer	Intermittent 970Hz 500ms on/500ms off	011110	800 cont
19	Intermittent tone 800Hz	Intermittent tone 800Hz at 0.5 sec on/off	011101	800 cont
20	800/500Hz 1-F Buzzer	Intermittent 970Hz 500ms on/500ms off	011100	800 cont
21	Intermittent tone 800Hz	Intermittent tone 800Hz at 0.5 sec on/off	010111	800 cont
22	1-F Buzzer	800/500Hz at 0.5 sec	010110	800 cont
23	1-F Buzzer	800Hz	010011	800 cont
24	Alarm tone 1st stage	800/500Hz at 0.5 sec	010010	800 cont
25	Alarm tone 2nd stage	800/500Hz at 0.5 sec	001111	800 cont
26	Alarm tone 3rd stage	Intermittent 800Hz 150 ms on / 500 ms off	001110	800 cont
27	Alarm tone 4th stage	Intermittent 800Hz 150 ms on / 500 ms off	001011	800 cont
28	Alarm tone 5th stage	Intermittent 800Hz	001010	800 cont
29	US Temporal Pattern 1-F	800Hz for 0.5 sec on 0.5 sec off	000111	800 cont
30	Alarm tone 6th stage	Intermittent 800Hz 150 ms on / 500 ms off	000110	800 cont
31	Alarm tone 7th stage	Intermittent 800Hz 150 ms on / 500 ms off	000011	800 cont
32	Alarm tone 8th stage	Intermittent 800Hz 150 ms on / 500 ms off	000010	800 cont

